



...continued.

9. Centralise the door frame within the two wall mounting profiles. Check that the door frame profiles are vertical on both sides and that the lower rail is horizontal. Tighten up the captive screws (Z) on both sides and then refit the cover strips to the wall mounting profiles using a rubber mallet if necessary. Fit the top cover caps.
10. **SILICONE SEALING** - clean and degrease tray/ floor before sealing.

**INSIDE:** Apply a continuous small bead of silicone sealant to the vertical wall mounting profile to wall joint.


**DO NOT SEAL THE LOWER HORIZONTAL OF THE WALL MOUNTING PROFILES ON THE INSIDE TO ENSURE THAT ANY WATER DRAINS BACK INTO THE TRAY/WET AREA.**

**OUTSIDE:** Apply a continuous bead of silicone to the lower edge joint of enclosure and shower tray/floor. Also seal vertically up the wall mounting profile/wall joint on each side to a height of 100mm. Ensure a good seal is made and there are no pin holes.

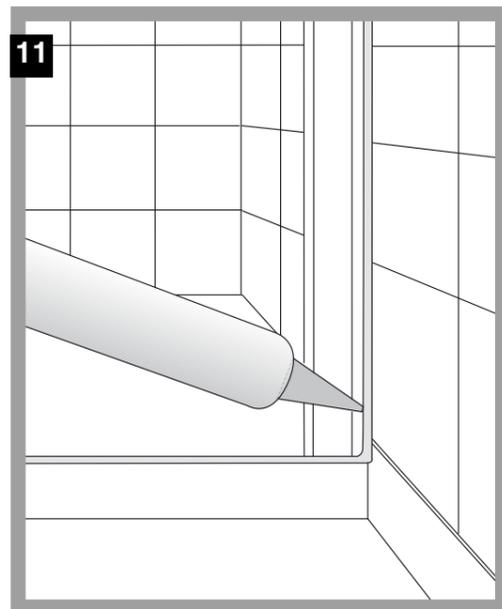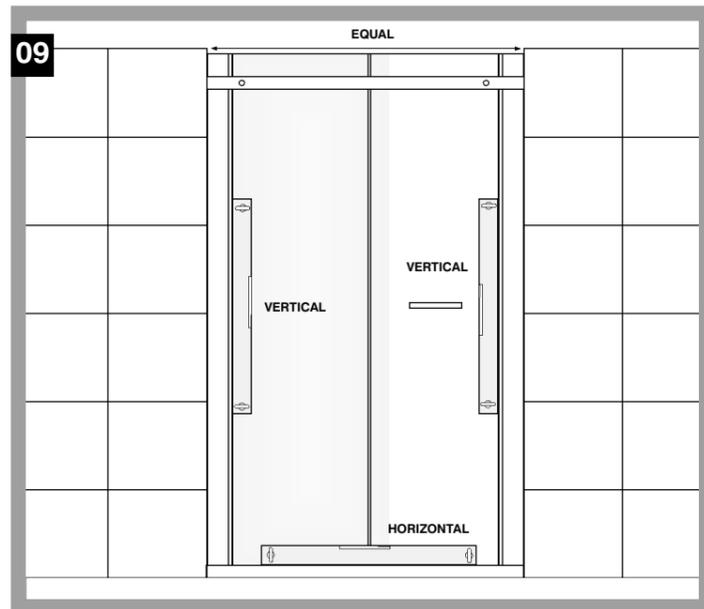

**DO NOT USE THE SHOWER ENCLOSURE FOR 24 HOURS TO ENSURE SILICONE IS FULLY CURED AND WATERPROOF.**

AQ 13-1-15 SP462

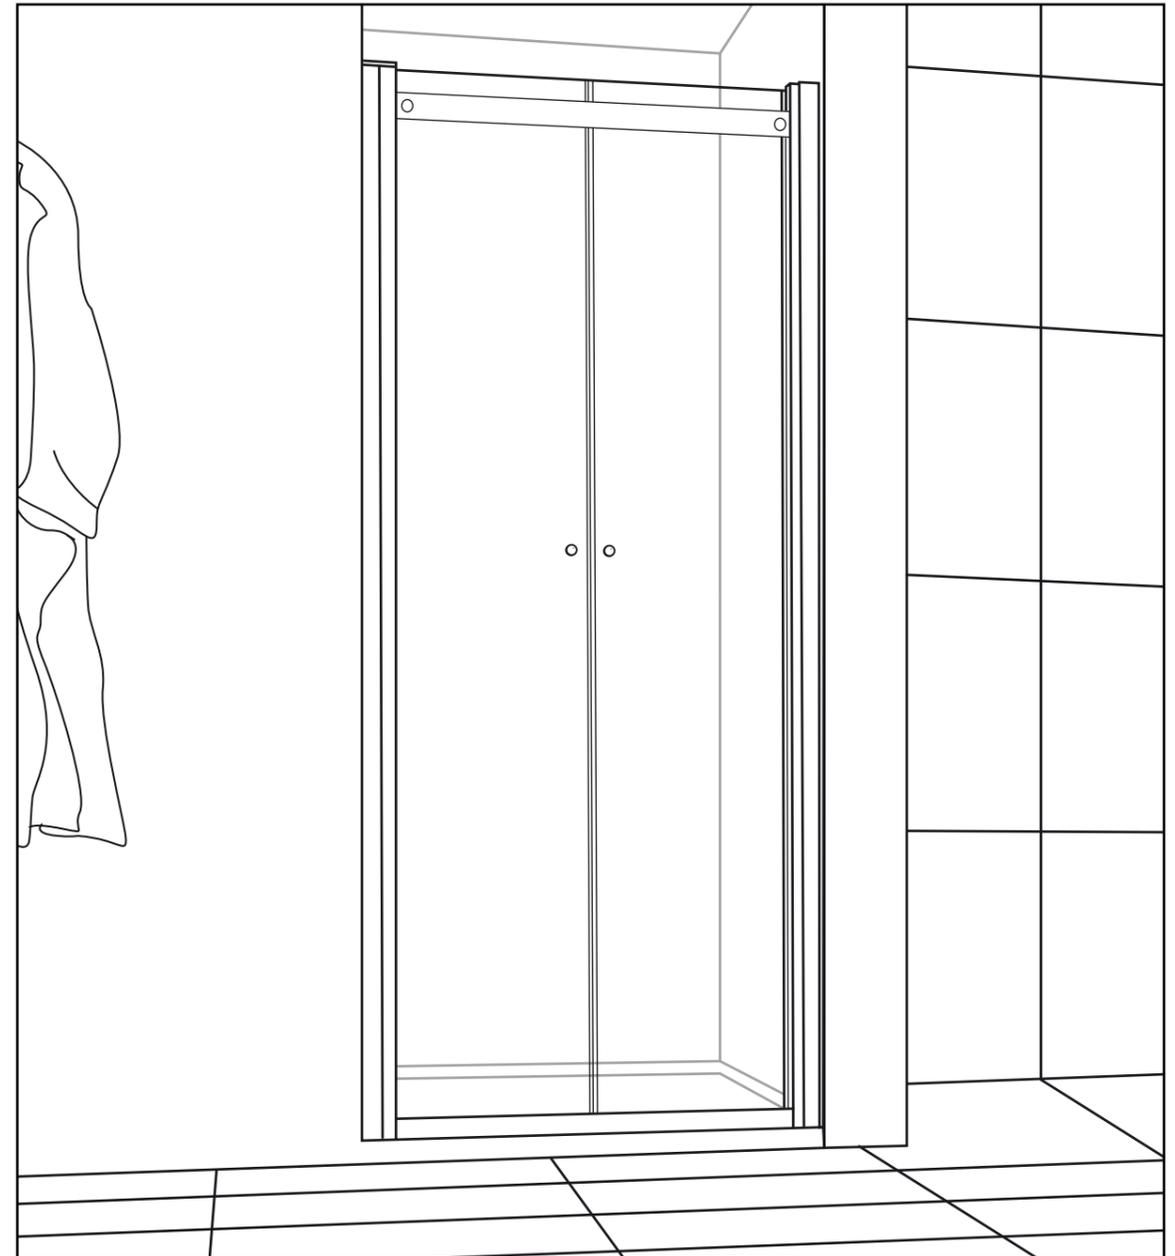

## Installation Instructions

### Spectra SP462 Folding Door – Recess Option

Issue 1 - January 2015

We recommend the shower tray is fitted correctly and sealed prior to tiling. Tile down onto the tray and re-seal before installing the shower enclosure.

# Spectra SP462 Folding Door Recess Option

 TWO PERSON INSTALLATION

## IMPORTANT

Please read the instructions and fully understand the process before attempting to fit the enclosure. Ensure that shower enclosure area is tiled prior to installation. Protect surface of shower tray during installation.

### Equipment Required









Power drill, 6mm masonry drill bit, tape measure, ruler, pencil, masking tape, sanitary grade silicone sealant, posidrive screwdriver / bits, spirit level and the fitting kit supplied which includes wall plugs, screws, plastic tube and allen keys.

The components for the Spectra Folding recess shower door are packed in one box comprising:

- Shower door
- Fitting kit
- Installation instructions
- Squeegee

Please open box with care and notify your supplier immediately if anything is damaged. Please do not discard packaging. Repack carefully if necessary.

- For wet room applications ensure the area is professionally sealed and that it is flat where the screen touches the floor. If fitting onto a shower tray follow the tray installation instructions. Ensure the tray is level using a spirit level on at least two diagonals. Check the tray has been sealed correctly and sealant is cured before attempting to install the shower screen. We recommend sealing the tray prior to tiling, tiling down onto tray and re-sealing. The floor area around the tray should also be sealed and waterproof.
- The adjustable wall mounting profiles for the door have concealed fixings. Remove cover strip (B) by sliding out from wall mounting profile (C) on both sides.
- Remove the captive screws (Z) from their TRANSIT position in wall profiles (C) but do not discard these screws. Separate the wall mounting profiles from the door frame on both sides.
- Locate the wall mounting profiles in the correct position, 10mm in from the edge of the tray. Plumb true with spirit level. Place 3 horizontal strips of masking tape onto the tiles in line with the 3 pre-drilled slots in the mounting profiles. Check for level and mark through holes with a pencil. Also mark tape at side of profile. Drill and plug the wall. Remove masking tape. Re-locate wall mounting profiles, re checking for plumb. Using the plastic tube from the fitting kit to hold the stainless steel screws provided, insert a cross point screwdriver into the tube and locate the head of the screw. Locate the screw into the wall plug through the wall mounting profile. Tighten screws re-checking with spirit level before tightening fully.
- On the non-fixed panel side of the door, undo and remove the Allen screw that holds the lower rail onto the door frame of the enclosure.
- Undo and remove the Allen screw that holds the top rail onto the door frame of the enclosure. Separate the door frame section from the top and bottom rails by pulling the top and bottom rails outwards from the enclosure.
- Taking care that the panels do not swing open, slide the door frame (on the fixed panel side of the door) into the wall mounting profile. Re-fit the captive screws (Z) through the slot in the wall profile and into the pre drilled hole in the main frame, but do not tighten fully until the enclosure is assembled.
- Take the (now separated) vertical door frame and slide it into the wall mounting profile. Reconnect the top and bottom rails to the door frame section with the Allen screws (you may need to adjust the door frame within the wall mounting profile to achieve this). Refit the captive screws (Z) into the frame but do not tighten.

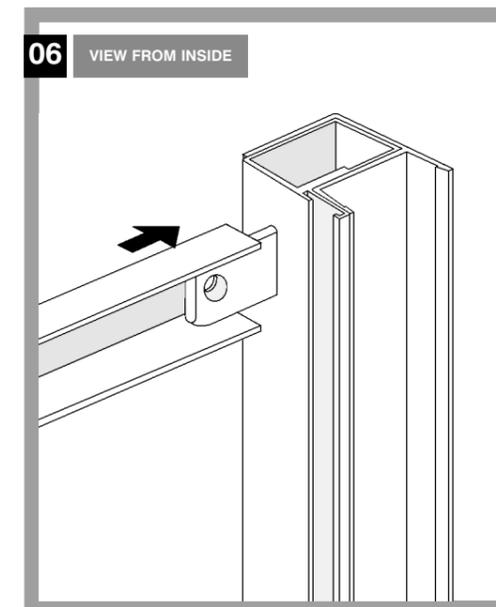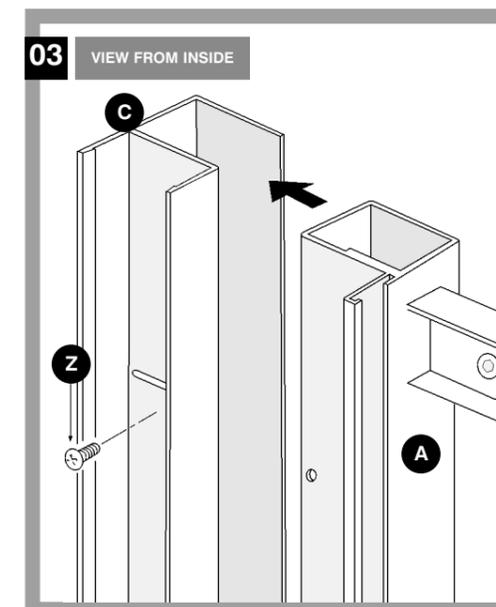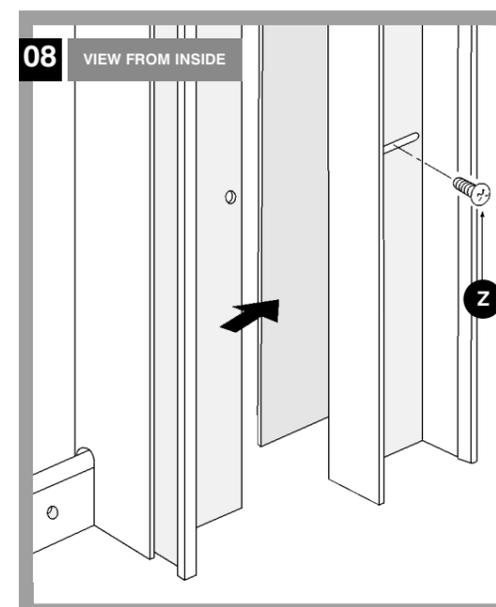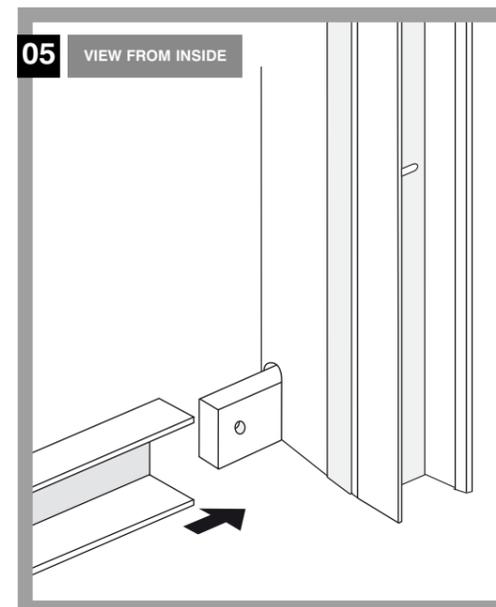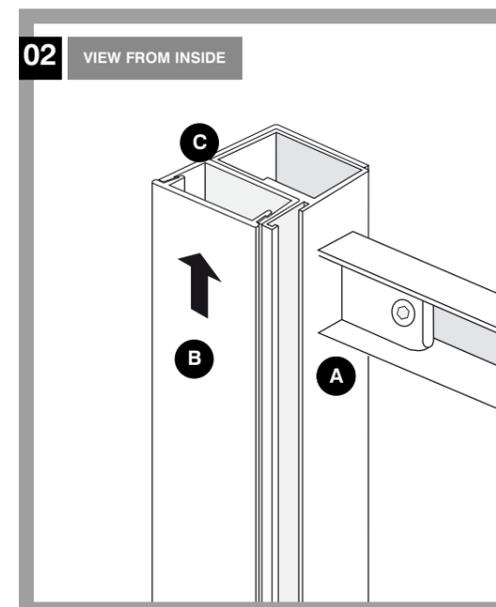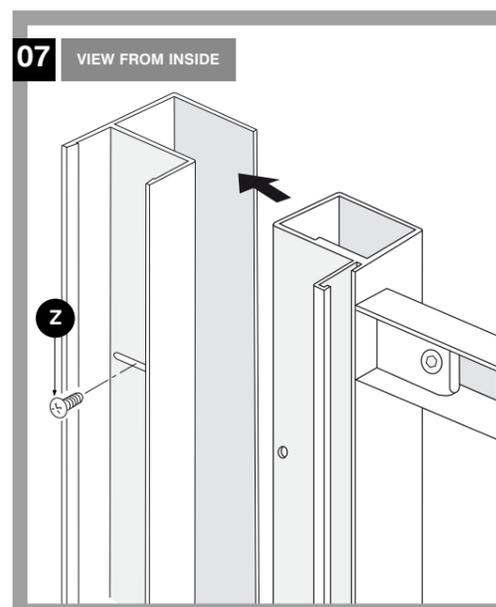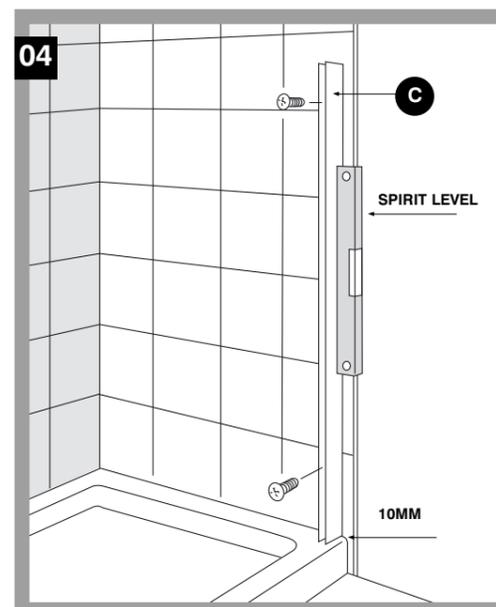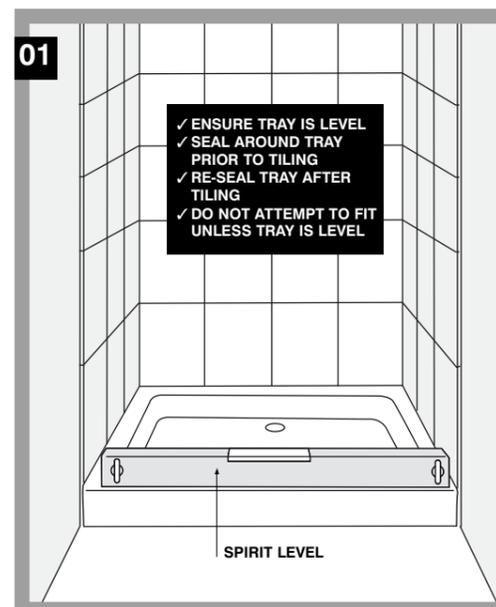

...the next generation of showering

Aqata provides the perfect solution for any bathroom

Visit our website for a full complement of bathroom accessories  
[www.aqata.co.uk](http://www.aqata.co.uk)